

Enter User Code. You now have 5 secs to change modes.
LEDs indicate the current mode.


U U U U

- User Functions
- 0** - To turn EXITGUARD to OFF mode
 - 1** - To arm EXITGUARD in CHIME mode
 - 2** - To arm EXITGUARD in KEY PAD RESET mode
 - 3** - To arm EXITGUARD in AUTO RE-ARM mode
 - Advance User Set Up Functions

Give this number to staff who are allowed to arm or turn the EXITGUARD to OFF

7 Press and hold 7 for SET-UP mode.

If the SET-UP LED flashes  then use only the codes below:-

If the SET-UP LED is steady  enter the manager code MMMM.

The SET-UP LED will then flash  then use only the codes below:-

Advanced User Functions

Escape from SET-UP mode and leave in the OFF mode

 **0** 

To change user code

 **1**  **U** **U** **U** **U** 

Give this number to staff cleared to arm/disarm EXITGUARD

Add/change optional pass code.

Allows passage through a door without the need to turn OFF and re-arm. Return passage is allowed using a pushbutton. Pass time is set by DOTL times.

Give this number to staff cleared to pass

 **7**  **P** **P** **P** **P** 

To remove optional pass code change to User code UUUU.

Note: DOTL times remain as already programmed.

 **7**  **U** **U** **U** **U** 

Add or change optional manager code. To use the manager code you must use the User code first as explained above.

 **8**  **M** **M** **M** **M** 

Restrict this number to security cleared staff

Adding a manager code restricts the ability of users to change various parameters to try and breach security.

To remove optional manager code (change to user code UUUU)

 **8**  **U** **U** **U** **U** 

Escape from SET-UP mode and leave in the OFF mode

 **0** 