


When the EXITGUARD leaves the factory or after a system reset there is no user code in memory. On powering up the four illuminated red LEDs are inviting you to enter a four digit code. As the code is entered each LED extinguishes. The code is now stored and the EXITGUARD will emit a double bleep and be in the OFF mode.

To restore the factory default settings disconnect power for 10 secs. Ensure the door contact and tamper loop are open. Move the SYSTEM RESET jumper J1 from its normal position to the reset position. Re-apply power four bleeps will be heard. Replace the jumper to the normal position. Two beeps will be heard and the four mode LEDs should be illuminated inviting you to enter a new user code. Close the tamper loop.

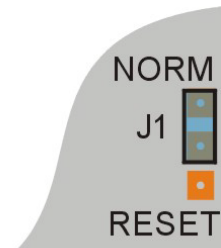

Enter User 4 digit User Code **0000** Press & hold **7**

If the SET-UP LED flashes then use the Engineer Function codes below:-

If the SET-UP LED is steady then you must first enter manager code M M M M

The Set-Up LED then will flash and you can then use the codes below:-

Engineer Functions	Escape from SET-UP Mode and leave the EXITGUARD in the Off mode	0
	To select tone (Default = 1)	2 ?
	<div style="display: flex; justify-content: space-around;"> <div>1 High fast</div> <div>2 High slow</div> <div>3 Normal fast</div> </div> <div style="display: flex; justify-content: space-around;"> <div>4 Normal fast</div> <div>5 Low fast</div> <div>6 Low Intermittant</div> </div>	<div style="border: 1px solid black; width: 40px; height: 20px; margin-left: auto;"></div>
	To change auto re-arm period. min = 0s max = 88s Default = 30 secs	3 ? ?
	Set Door Open Too Long (DOTL) delays	Two digits <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> 00 - 88 secs
	under Key Pad control, DOTL1 Default = 00m 00s Max = 88m58s	4 ? ? ?
	1st two digits <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> 00 - 88 mins	2nd two digits <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> 00 - 58 secs
	under Auto Re-arm control, DOTL2 Default = 00m 00s max = 88m58s	5 ? ? ?
	1st two digits <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> 00 - 88 mins	2nd two digits <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> 00 - 58 secs
	Note the DOTL delays above are the pass through delays when pass code operation is invoked.	
Set Bleep In Off. (Default is Off)	6 BIO ✓	
Off <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div> On <div style="border: 1px solid black; width: 40px; height: 20px; display: inline-block;"></div>	6 BIOX	
Escape from SET-UP Mode and leave the EXITGUARD in the OFF mode	0	