


## A600W Quick pairing guide

**Ensure polarity is observed when inserting batteries as fitting them incorrectly will damage the unit.**


- Set jumper on controller to pair.
- Remove and re-apply power.
- The “pair LED” will start to flash.




- On the reset/call point set the jumper to pair.
- Remove and reinsert the battery.
- Press the button on the front and the LED should illuminate steady.
- Move the jumper to pair.
- The LED should flash when it extinguishes it is paired.
- Repeat for any other call point or reset buttons.

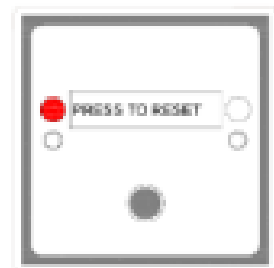

- On the over door light set the jumper to Pair.
- Remove and replace the battery and the LED's should illuminate steady.
- Move the jumper to active.
- The LED's will flash, when they stop the unit is paired.
- Repeat for any other indicators.

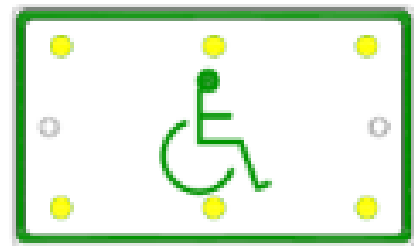

- On the pull cord set the jumper to pair.
- Remove and replace the battery .
- Pull the stalk/cord and the LED should illuminate steady.
- Move the jumper to active.
- The LED will flash, when they stop the unit is paired.
- Repeat for any other pull cords.

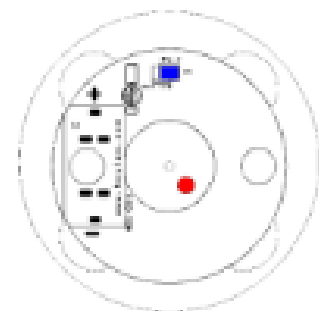

- At the main controller move the jumper to Active.
- The LED should stop flashing.
- The system is ready to use.

